



## Hardware Overview

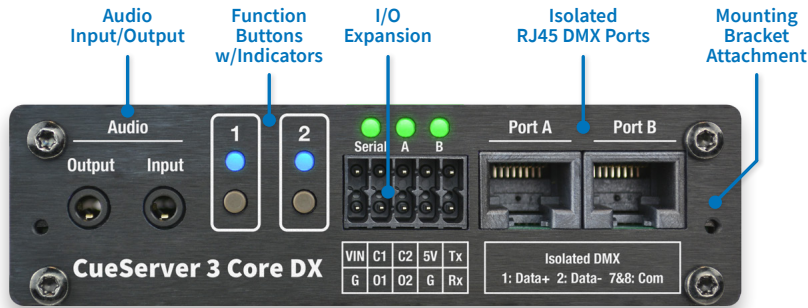

Front Panel

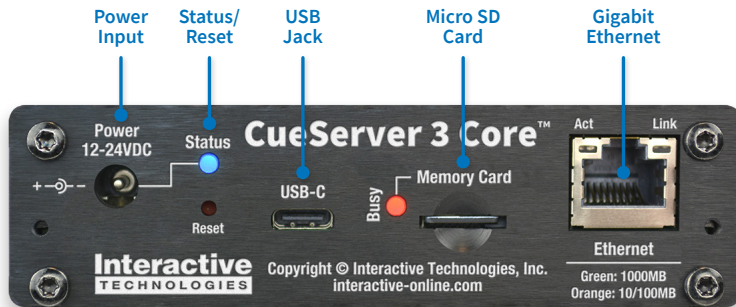

Rear Panel

## What's in the Box

- CS-3150 CueServer 3 Core DX Processor
- 10-Position Removable Terminal Block
- Power Supply

## Startup Procedure



### • Connect CueServer to the Network

Use an Ethernet patch cable to connect CueServer to your Ethernet Switch or directly to your computer.



### • Connect CueServer to Power

Use the included Power Supply with CueServer.



### • Open CueServer Studio on your Computer

You can download CueServer Studio from [cueserver.com](https://cueserver.com).



### • CueServer should appear in the Navigator Window

CueServer Studio's main Navigator Window searches for and displays all CueServers found on the network.

## What's Next

### • Visit our Website for More

Our website contains more information, including User's Manual, Downloads, Guides, Examples, Training and more. You can start your CueServer journey at:

**[cueserver.com](https://cueserver.com)**

### Interactive Technologies, Inc.

5295 Lake Pointe Center Drive  
Cumming, GA 30041 USA  
1-678-455-9019  
[interactive-online.com](https://interactive-online.com)