

EN

DMX Values

17 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Red Fine	000 ⇔ 255	0–100%
5	Orange	000 ⇔ 255	0–100%
6	Orange Fine	000 ⇔ 255	0–100%
7	Green	000 ⇔ 255	0–100%
8	Green Fine	000 ⇔ 255	0–100%
9	Royal Blue	000 ⇔ 255	0–100%
10	Royal Blue Fine	000 ⇔ 255	0–100%
11	Blue	000 ⇔ 255	0–100%
12	Blue Fine	000 ⇔ 255	0–100%
13	Lime	000 ⇔ 255	0–100%
14	Lime Fine	000 ⇔ 255	0–100%
15	Strobe	000 ⇔ 010	No Function
		011 ⇔ 255	Strobe, slow to fast
16	Color Temperature	000 ⇔ 255	Refer to the Preset Color Temperature Chart
17	Hue	000 ⇔ 000	No Function
		001 ⇔ 255	Adjusts +/- green

15 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Red Fine	000 ⇔ 255	0–100%
5	Orange	000 ⇔ 255	0–100%
6	Orange Fine	000 ⇔ 255	0–100%
7	Green	000 ⇔ 255	0–100%
8	Green Fine	000 ⇔ 255	0–100%
9	Royal Blue	000 ⇔ 255	0–100%
10	Royal Blue Fine	000 ⇔ 255	0–100%
11	Blue	000 ⇔ 255	0–100%
12	Blue Fine	000 ⇔ 255	0–100%
13	Lime	000 ⇔ 255	0–100%
14	Lime Fine	000 ⇔ 255	0–100%
15	Strobe	000 ⇔ 010	No Function
		011 ⇔ 255	Strobe, slow to fast

11 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Red	000 ⇔ 255	0–100%
3	Orange	000 ⇔ 255	0–100%
4	Green	000 ⇔ 255	0–100%
5	Royal Blue	000 ⇔ 255	0–100%
6	Blue	000 ⇔ 255	0–100%
7	Lime	000 ⇔ 255	0–100%
8	Strobe	000 ⇔ 010	No Function
		011 ⇔ 255	Strobe, slow to fast
9	Color Temperature	000 ⇔ 255	Refer to the Preset Color Temperature Chart
10	Hue	000 ⇔ 000	No Function
		001 ⇔ 255	Adjusts +/- green
11	Dimmer Speed	000 ⇔ 051	No Function
		052 ⇔ 101	Dimmer speed mode off (Hold 3 sec, override menu and change)
		102 ⇔ 152	Dimmer speed mode 1 (Hold 3 sec, override menu and change)
		153 ⇔ 203	Dimmer speed mode 2 (Hold 3 sec, override menu and change)
		204 ⇔ 255	Dimmer speed mode 3 (Hold 3 sec, override menu and change)

8 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Red	000 ⇔ 255	0–100%
3	Orange	000 ⇔ 255	0–100%
4	Green	000 ⇔ 255	0–100%
5	Royal Blue	000 ⇔ 255	0–100%
6	Blue	000 ⇔ 255	0–100%
7	Lime	000 ⇔ 255	0–100%
8	Strobe	000 ⇔ 255	0–100%
		000 ⇔ 255	0–100%

6 Ch

Channel	Function	Value	Percent/Setting
1	Red	000 ⇔ 255	0–100%
2	Orange	000 ⇔ 255	0–100%
3	Green	000 ⇔ 255	0–100%
4	Royal Blue	000 ⇔ 255	0–100%
5	Blue	000 ⇔ 255	0–100%
6	Lime	000 ⇔ 255	0–100%

5Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Color Temperature	000 ⇔ 255	Refer to the Preset Color Temperature Chart
4	Hue	000 ⇔ 000	No Function
		001 ⇔ 255	Adjusts +/- green
5	Strobe	000 ⇔ 255	0–100%
		000 ⇔ 255	0–100%

QUICK REFERENCE GUIDE



EN

3Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Color Temperature	000 ⇔ 255	Refer to the Preset Color Temperature Chart
3	Hue	000 ⇔ 000	No Function
		001 ⇔ 255	Adjusts +/- green