

---

## DMX Values

### 1Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%

### 2Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 000	0-100%
2	Strobe	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast

### 5Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0-100%
2	Strobe	000 ⇔ 010	No function
		011 ⇔ 255	Strobe, slow to fast
3	Auto programs	000 ⇔ 015	No function
		016 ⇔ 095	Auto program 1
		096 ⇔ 175	Auto program 2
4	Auto Speed	176 ⇔ 255	Auto program 3
		000 ⇔ 255	0-100%
5	Dimmer Speed Mode	000 ⇔ 051	No function
		052 ⇔ 101	Linear dimmer
		102 ⇔ 152	Nonlinear dimming curve 1 (fastest)
		153 ⇔ 203	Nonlinear dimming curve 2
		204 ⇔ 255	Nonlinear dimming curve 3 (slowest)

---