

# ETC Assembly Guide

## Source Four® Lens Tube Configuration

The lens tube castings for Source Four ellipsoidal spotlights can hold either original or Enhanced Definition lenses.

The information in this document supersedes information in the *Source Four User Manual* and the *Source Four Assembly Guide*. When assembling the lens tube for your Source Four ellipsoidal spotlight, refer to this document for lens identification and placement.

### Lens Positions

The barrel casting includes an additional position for lens placement and color-coding for all lens positions. For any lens position, only lenses bearing at least one dot of the indicated color should be placed in that position.

Lens position color codes are shown below. Beneath each color you will also find the actual text as shown within the lens tube, indicating both the color and degree lenses that can occupy that position. In the image below, "ED" refers to Enhanced Definition lenses.



Corporate Headquarters ■ Middleton, WI, USA ■ Tel +608 831 4116 ■ Service: (Americas) [service@etcconnect.com](mailto:service@etcconnect.com)

London, UK ■ Tel +44 (0)20 8896 1000 ■ Service: (UK) [service@etcconnect.com](mailto:service@etcconnect.com)

Rome, IT ■ Tel +39 (06) 32 111 683 ■ Service: (UK) [service@etcconnect.com](mailto:service@etcconnect.com)

Holzkirchen, DE ■ Tel +49 (80 24) 47 00-0 ■ Service: (DE) [techserv-hoki@etcconnect.com](mailto:techserv-hoki@etcconnect.com)

Hong Kong ■ Tel +852 2799 1220 ■ Service: (Asia) [service@etcconnect.com](mailto:service@etcconnect.com)

Web: [etcconnect.com](http://etcconnect.com) ■ © 2018 Electronic Theatre Controls, Inc.

Product information and specifications subject to change. ETC intends this document to be provided in its entirety.


7060M4100 ■ Rev C ■ Released 2018-02

# ETC Assembly Guide

## Source Four Lens Tube Configuration

### Lens Markings

All Source Four lenses have color-coded dots for identification. Normal lenses have a single dot of color. Enhanced Definition lenses have a combination of white dots and colored dots.

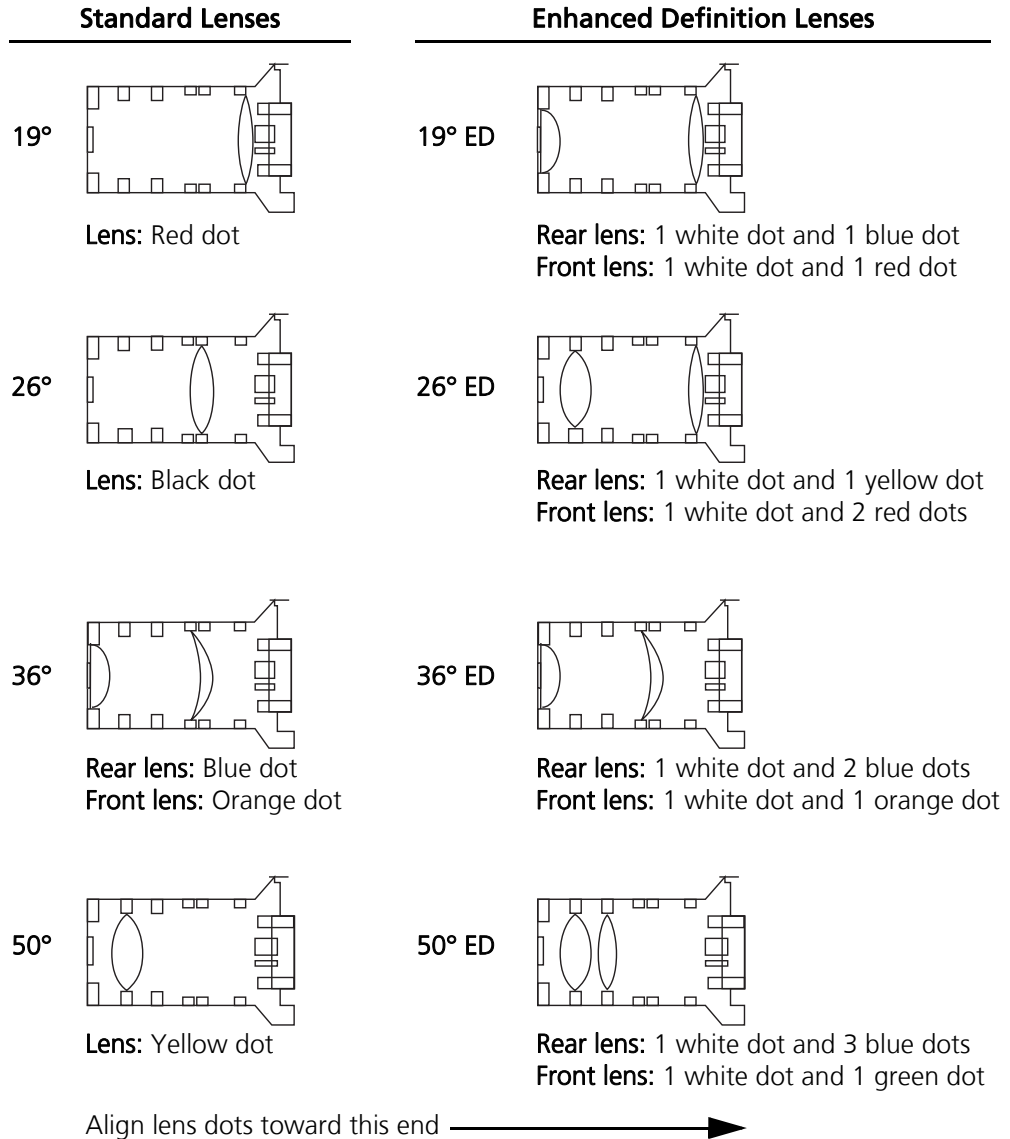

For maximum gel life with specific lens tubes refer to the tables below:

Lens Tube	Soft Focus Tube Back	Sharp Focus	Soft Focus Tube Forward
19°	✘	✔	✔
26°	✘	✔	✔
36°	✔	✔	✘
50°	✘	✔	✔
✔ = Better gel life ✘ = Worse gel life			

ED Lens Tube	Soft Focus Tube Back	Sharp Focus	Soft Focus Tube Forward
19° ED	✘	✔	✔
26° ED	✔	✔	✘
36° ED	✔	✔	✘
50° ED	✔	✔	✘
✔ = Better gel life ✘ = Worse gel life			