


ETC Setup Guide

Response Mk2 Two-Port Gateway

This guide covers installation and basic setup of the Response Mk2 Two-Port Gateway. You can configure additional software features using the Net3 Concert software from ETC. Reference the Help system built into Concert for more information. Net3 Concert software can be found at etcconnect.com/Concert.

Overview

There are two versions of the Two-Port Gateway: a wall-mount version and a portable version.

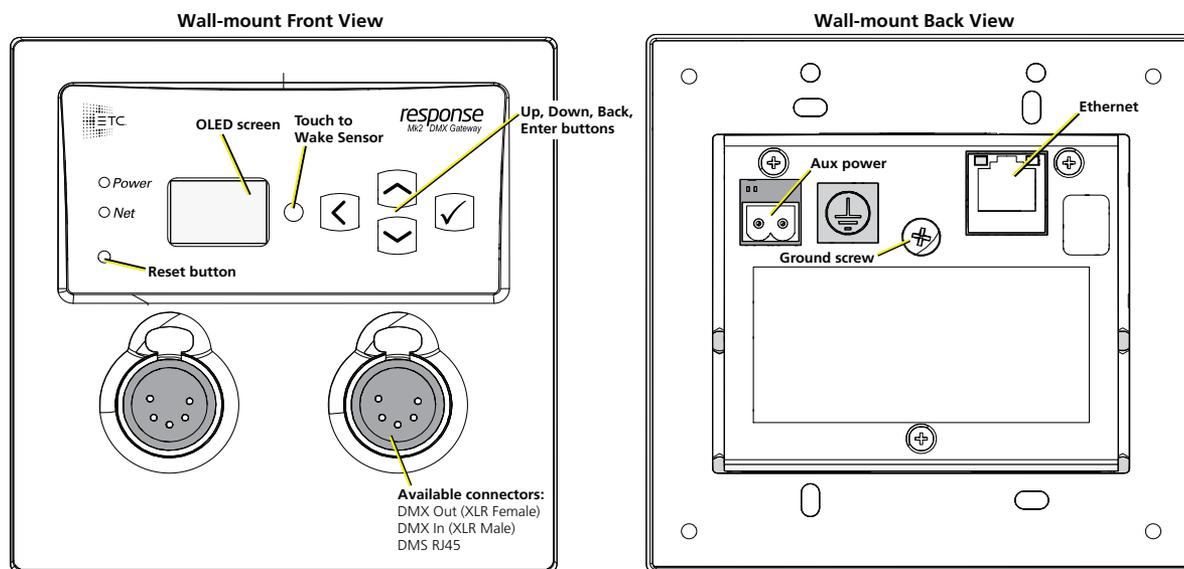

Action Buttons

- Up, Down, Back buttons - The Back button allows you to return to the previous menu or option and the Up and Down buttons navigate between menu options
- Enter - The Enter button allows you to advance to the next available menu option or commit a modified selection
- Reset - The Reset button provides a physical button to reset the gateway
- Touch to Wake Sensor - Cover the sensor with your hand to wake the display

LED Indicators

- Power - Solid blue indicates that power is supplied
- Network - Solid green indicates network connection and blinking indicates network activity



ETC Setup Guide

Two-Port Gateway

Electrical Specifications

The gateways are powered by either auxiliary power or Power over Ethernet (PoE).

- Auxiliary power input rated voltage of 12-24 VDC, 4 W Max, Polarity Independent
- 10/100Base-T, PoE power Class 1 (IEEE 802.3af)

For auxiliary power, the wall-mount gateway uses a two-position screw clamp terminal block. The portable gateway uses a screw locking DC barrel connector for use with an external power supply (available separately).

If you supply both PoE and auxiliary power, the gateway defaults to using auxiliary. If auxiliary power is lost, the gateway will reboot and then begin using PoE.



Note: If you are using an external power supply, it must be rated at a maximum of 15 watts.

Connection Options

There are three different connector types available depending on your gateway:

- DMX Out (five-pin female XLR)
- DMX In (five-pin male XLR)
- DMX RJ45 (input or output)


The Response Mk2 Gateways send and receive DMX-512 control signals. DMX cables must be acceptable for DMX data transmission and connections should follow the standard pinouts per the charts below. The optional secondary data pair is not used by the Response Mk2 Gateways.

The DMX RJ45 variant can use a standard RJ45 Cat5e cable or better to transmit DMX-512 to other devices with the same connector.




Note: The DMX RJ45 connector does not function as an Ethernet network port.

Pinouts

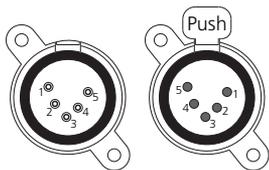

DMX-512
Pinout for
five-pin XLR

Pin	Use
1	Common (shield)
2	Data -
3	Data +
4	not connected
5	not connected

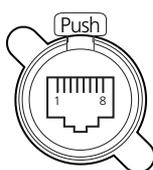

DMX-512 Pinout
for RJ45


Pin	Use	Wire Color
1	Data 1 +	w/orange
2	Data 1 -	orange
3	not used	w/green
4	not used	blue
5	not used	w/blue
6	not used	green
7	Signal Common	w/brown
8	Signal Common	brown

ETC Setup Guide

Two-Port Gateway


DMX Termination

Termination is required for all DMX systems and belongs at the source (beginning) of a DMX line and at the last device physically connected in the line. A termination switch is located internally for each input/output and can be configured for DMX termination (IN), No termination (OFF) or RDM termination (OUT). By default, the DMX termination switch is set to the appropriate position based on the port type (Female XLR, RJ45 and terminal set to OUT and Male XLR set to IN).

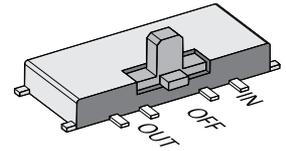

If you need to change the termination setting, perform the following steps:

1. Disconnect your gateway from all power supplies.
2. Remove the gateway from the back box or portable enclosure. The termination switches are between the two printed circuit boards, one on either side of the gateway.
3. Set the termination switch to the appropriate configuration.

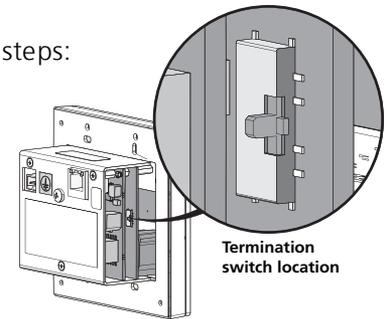

About RDM

Remote Device Management (RDM, ANSI E1.20) is a protocol enhancement to DMX-512 that allows bidirectional communication between a lighting system controller and attached RDM-compliant responder devices over a standard DMX line. This protocol allows configuration, status monitoring, and management of these devices.

An RDM Controller is the device that initiates communication with one or more RDM Responder devices. Examples of responders are RDM-enabled edge devices such as color scrollers, dimmers, moving lights, and LED fixtures. Compliant DMX-512 and DMX-512-A devices (non-RDM devices) are fully functional when RDM is present. The Response Mk2 Gateway supports up to 256 total RDM devices across its ports using standard DMX system design practices.



Note: RDM is currently only supported on DMX Output ports.

RDM Basics

By default, RDM discovery is not enabled on the gateway. To enable RDM on the gateway, use the Net3 Concert software or the user interface on the front of the gateway. Please see the Concert online help files for more information on activating RDM on your gateways or see [Configure RDM Settings on page 7](#).

ETC Setup Guide

Two-Port Gateway

Installation



Note: Installation must follow all national and local codes for electrical equipment.


The Two-Port gateway is available in a wall-mount (for installation into a back box) and a portable (pipe, bar or truss mounted) version.

Wall-Mount

For surface-mount applications, ETC recommends using an ETC two-gang surface-mount back box (part# 1064A1038). For flush-mount applications, use an industry standard two-gang, deep back box or equivalent (provided by others). The back box should be installed plumb and square for best results. Ensure that the box is clean and free of obstructions and that all wiring is installed correctly.

Attach Bezel to Back Box

Before you install your gateway into the back box, you must attach the bezel, as the wires must pass through the bezel from the back box. Using the four screws provided, secure the bezel to the back box.

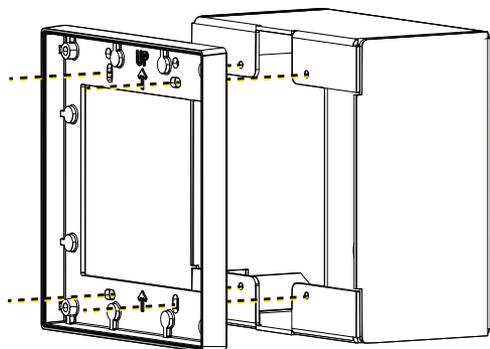


Connect Wiring

Pull all required wiring to the back box, including an Ethernet cable (Category 5e or better) and ground wire. Terminate the Ethernet cable using the included kit (part# 4101A2003). Then connect the termination box to the gateway using the short male-to-male Ethernet cable included with the kit.

If you are using auxiliary power, perform the following steps:

1. Run the supply wires to the back box, leaving a 300 mm (12 in) tail.
2. Strip 5 mm (3/16 in) of insulation from the ends of the incoming wires.
3. Insert the positive wire into the left hand screw terminal and tighten the terminal screw to 7 in-lb (0.5 Nm).
4. Insert the negative wire into the right hand terminal of the connector and tighten the terminal screw to 7 in-lb (0.5 Nm).
5. Connect the two-pin connector to the port on the back of the gateway.

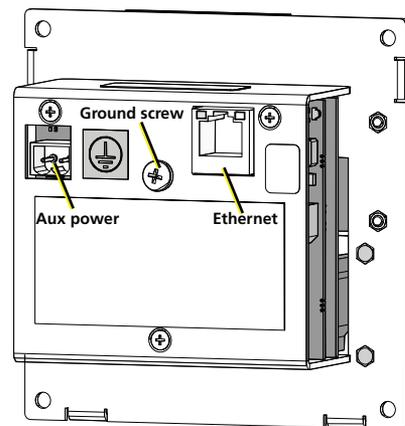


ETC Setup Guide

Two-Port Gateway


- Using the harness and WAGO® connector provided, connect the ground wire to the ground screw on the back of the unit.

Install into Back Box

- Insert the gateway electronics and wiring through the bezel and into the back box.
- Using the four screws (M4 x 6 mm) provided, secure the gateway to the bezel.

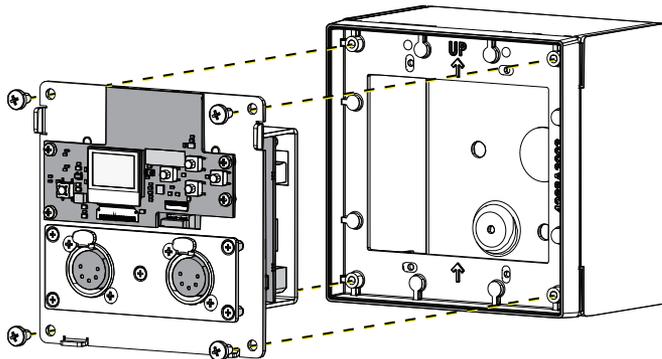

- Attach the face plate to the front of the gateway. To do this, you must align the face plate so that the port latch locks (PUSH buttons) are centered on the port holes.
- With the top of the face plate angled slightly away from the gateway, move the plate so the latch locks extend through the plate.

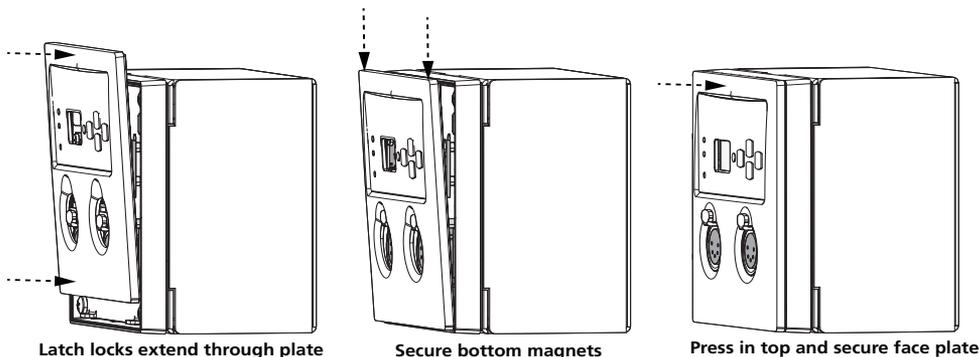


- Shift the plate down until the bottom magnets secure the plate to the gateway and then press in the top so the entire face plate is secure.

Portable

The portable version of the gateway is designed for easy setup and can be mounted using the mounting bracket. The bracket contains holes that accommodate standard mounting hardware (available separately).

Once you have mounted the portable gateway, connect an RJ45 cable to the connector on the side of the unit. If you are not using PoE to power the gateway, connect a compatible power supply (available separately) to the barrel connector on the side of the gateway.

If you are not using either a grounded etherCON connector or DC power supply, use the ground point to connect the gateway to a suitable earth ground point.

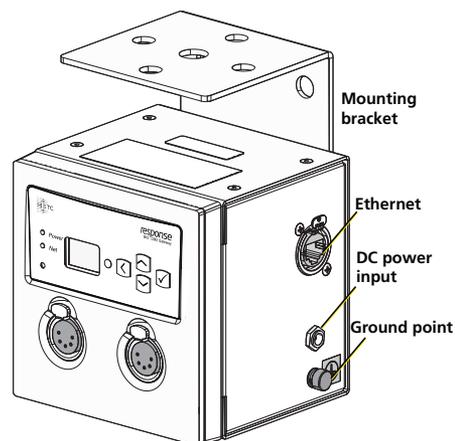

ETC Setup Guide

Two-Port Gateway

Gateway User Interface and Configuration

The following sections provide information on basic tasks and configuration that you can perform from the user interface of the gateway. These tasks and additional configuration can all be performed using the Net3 Concert application, available from etconnect.com.

Home Screen Information

The initial screen that your gateway displays is the Home screen. This screen provides the name of the gateway, the IP address and some basic port information. The following is an example of what a typical home screen might look like.



Here, you'll see that the gateway name is DMX Gateway, IP address is 10.101.101.101 and port 1 is actively outputting DMX from universe 63999.

Pressing the **Up** and **Down** buttons from the Home screen cycles through the different ports of your gateway.

Pressing the **Enter** button from the Home screen brings up three selectable menu options (**About**, **Setup**, **Operations**) from which you can access other information or configuration options.

If attempting to access the **Setup** or **Operations** options displays **User Interface Locked**, your gateway UI has been locked from the Net3 Concert application. To unlock the UI, reference the Device Help for **Response Gateway Mk2** in Net3 Concert software.

View Device Information

To view information specific to your gateway, select the **About** menu option from the Home screen. From the About screen, you can select one of the following four options and then view the information specific to that option:

General	View Levels	Port Info	RDM Info
Ver: 1.0.0.12 FPGA: 1.0.0 MAC 00:c0:16:00:00:00	Port 1 Channel 1 State Active Level 127(50%)	Port 1 Mode Output U: 63999 Speed Max	Port 1 RDM Enabled Background Off Devices 128

Configure Network Settings

To configure network settings for your gateway, perform the following steps:

1. From the Home screen, select **Setup > Network**.
2. From the Mode screen, use the **Up** and **Down** buttons to select **Manual**, **Link Local** or **Automatic**.
 - **Automatic** attempts to automatically configure the IP Address, IP Subnet and IP Gateway for your device via DHCP.
 - If you select **Manual**, you must configure the IP Address, IP Subnet and IP Gateway screens and then select **OK** from the Apply/Reboot? screen.
 - If you select **Link Local**, the gateway self-assigns an IP address that is valid for the local network in the link-local address range. Select **OK** from the Apply/Reboot? screen.

ETC Setup Guide

Two-Port Gateway

Configure Port Settings

To configure the ports of your gateway, perform the following steps:

1. From the Home screen, select **Setup > Ports**.
2. Use the **Enter** button to move from the menu options on the left to the values on the right side of the screen. Use the **Up** and **Down** buttons to change the values and press **Enter** again to confirm the change. Using these controls, configure the fields on screen:
 - **Port** - Select the port for which the following values apply:
 - **Mode** - Select the port mode. This can be set to Input, Output or Disabled.
 - **Universe** - Select the Universe of the port (1-63999).
 - **HLL** - Select whether Hold Last Look (HLL) is on or off. Selecting **On** enables Hold Last Look Forever. By default, the output holds for five minutes. Additional configuration options are available through Net3 Concert.

Configure RDM Settings

To configure RDM for your gateway, perform the following steps:

1. From the Home screen, select **Setup > RDM**.
2. Use the **Enter** button to move from the menu options on the left to the values on the right side of the screen. Use the **Up** and **Down** buttons to change the values and press **Enter** again to confirm the change. Using these controls, configure the fields on screen:
 - **Port** - Select the port for which the following values apply:
 - **RDM** - Select whether RDM is enabled or disabled on the port.
 - **Background** - Select whether background discovery and polling of RDM is on or off.

Modify Device Settings

To restore the factory defaults or upgrade the software for your device, select the **Operations** menu from the Home screen. From here, you can select the following options:

Restore Defaults - Select **OK?** from the Restore Defaults screen to restore all default values to your device. This removes all information that is configured for your gateway.

Restore Defaults
All data
will be lost
OK?

Update Software - Select **OK?** from the Update Software from server <#.#.#.#> screen if you need to update the software directly from the gateway.



Note: *The recommended method of updating is through UpdaterAtor. Regardless of whether you update from UpdaterAtor or directly from the gateway, the device must be on the network.*

Update Software
from server
10.101.50.60
OK?

If you do choose to update directly from the gateway, the bootloader runs and the latest software is downloaded from the server indicated by the <#.#.#.#> IP address on the Update Software screen. If you need to modify this IP address, you can configure it in the Net3 Concert application using the **Update Server** property.

ETC Setup Guide

Two-Port Gateway

Test Port Output

You can test DMX outputs by selecting **Operations > Test Output** from the Home screen.



CAUTION: *Testing outputs drives all DMX levels to full. Use with caution in a show situation or when controlling high current devices.*

Port	1
State	-
Release All	

This screen allows you to test the output for any port on your gateway.

- **Port** - Press the **Enter** button to select and then use the **Up** and **Down** buttons to cycle through the ports of your gateway. Press **Enter** again to select the port.
- **State** - Press **Enter** to select and then use the **Up** and **Down** buttons to cycle through the test state options. If the port is an input, this field displays either Input or Disabled. If the port is an output, you can select either Released (--), Full or All Zero.
- **Release All** - Press the **Enter** button to release the test state on all ports. Once outputs are set into a test state they can be released from this menu, from the Net3 Concert application or by rebooting the gateway.



Note: *This product uses licensed software provided by third parties. Please visit <http://www.etconnect.com/licenses/> for licensing information.*
