


USER MANUAL



MOVING HEADS SERIES G-7 SPOT



G-7 Spot dimensions

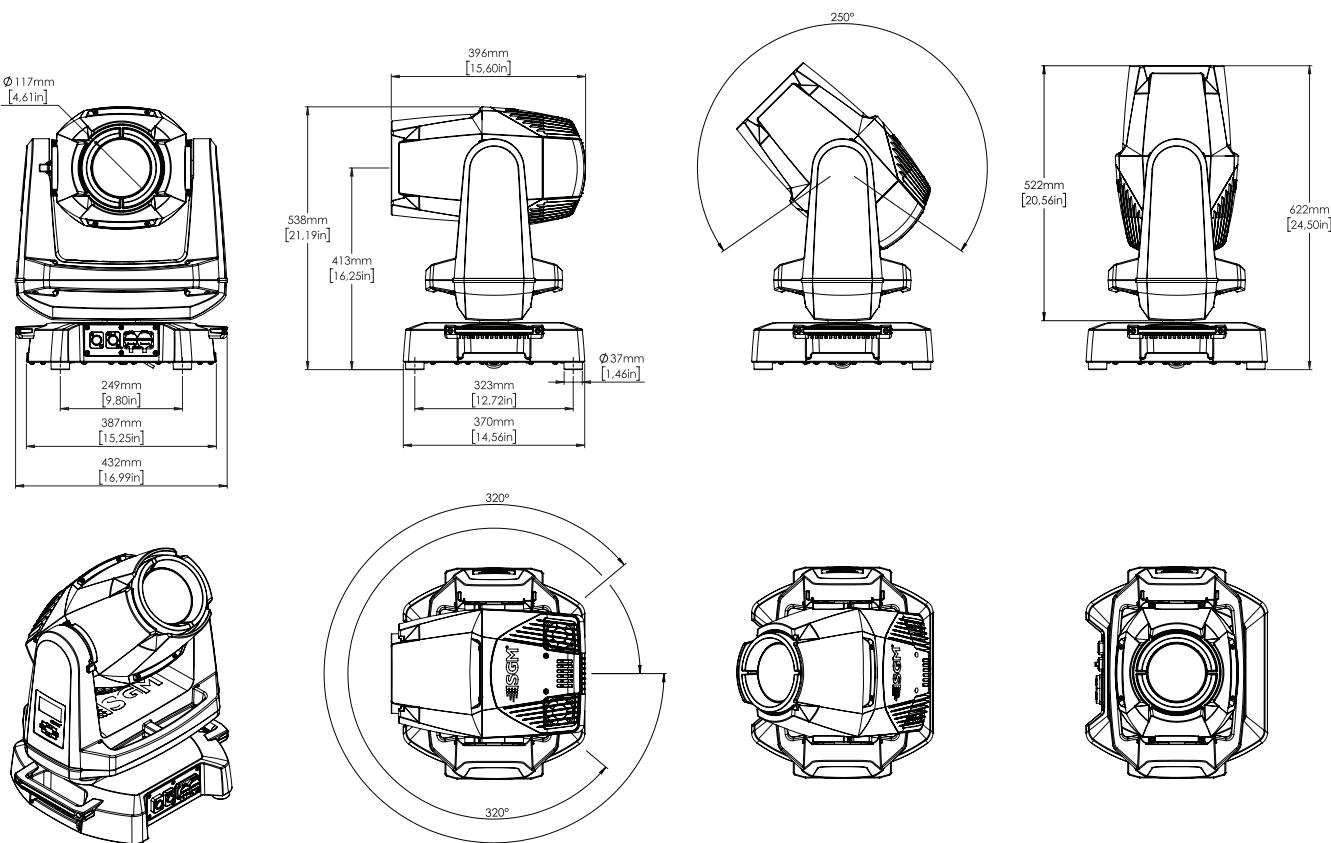

All dimensions in millimeters and inches. Drawing not to scale.

This manual covers installation, use, and maintenance of the SGM G-7 Spot.
A digital version is available at www.sgmlight.com, or upon request via support@sgmlight.com.

G-7 SPOT USER MANUAL REV. B

© 2018 SGM Light A/S®. The information in this document is subject to change without notice.

SGM and all affiliated companies disclaim liability for any injury, damage, direct or indirect loss, consequential or economic loss, or any other loss occasioned by the use of, inability to use, or reliance on the information contained in this manual. The SGM logo, the SGM name, and all other trademarks in this document pertaining to SGM services or SGM products are trademarks owned or licensed by SGM, its affiliates, and subsidiaries.

English edition

Contents

Safety information.....	4
Overview	5
Preparing for installation.....	6
Installing / Rigging the G-7 Spot.....	6
Connecting AC power.....	8
Configuring the device.....	8
Connecting to a DMX control device	9
Configuring the device for DMX control.....	9
Configuring the device for DMX control.....	10
Control menu	11
RDM	11
Factory default	11
Fixture properties	12
Fixture properties	13
Gobo wheels	13
Gobo replacement.....	14
GORE-TEX® Membrane	15
Accessories	16
G-7 Spot Top Hat.....	16
Troubleshooting	17
Maintenance.....	18
Ordering Information	19
Support hotline	19
Approvals and certifications	19
User Notes	20
User Notes	21

Safety information



WARNING!

Read the following safety precautions carefully before unpacking, installing, powering, or operating the device.



SGM luminaries are intended for professional use only. They are not suitable for household use.

Les luminaires SGM sont impropre à l'usage domestique. Uniquement à usage professionnel.

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Ce produit doit être installé selon le code d'installation pertinent, par une personne qui connaît bien le produit et son fonctionnement ainsi que les risques inhérent.



DANGER! Risk of electric shock. Do not open the device.

- Do not open the device; there are no user-serviceable parts inside.
- Ensure that power is cut off when wiring the device to the AC mains supply.
- Ensure that the device is electrically connected to earth (ground).
- Do not apply power if the device or mains cable is in any way damaged.
- Do not immerse the fixture in water or liquid.
- Mount at least 102mm (4 inches) above ground level



WARNING! Take measures to prevent burns and fire.

- Install in a location that prevents accidental contact with the device.
- Install only in a well-ventilated space.
- Install at least 0.3 m (12 in.) away from objects to be illuminated.
- Install only in accordance with applicable building codes.
- Ensure a minimum clearance of 0.1 m (4 in.) around the cooling fans.
- Do not paint, cover, or modify the device, and do not filter or mask the light.
- Keep all flammable materials well away from the device.
- Allow the device to cool for 15 minutes after operation before touching it.

CAUTION: Exterior surface temperature after 5 min. operation = 55 °C (131 °F). Steady state = 65 °C (149 °F).



WARNING! Take measures to prevent personal injury.

- Do not look directly at the light source from close range.
- Take precautions when working at height to prevent injury due to falls.
- For Permanent Outdoor Installations (POI), ensure that the fixture is securely fastened to a load-bearing surface with suitable corrosion-resistant hardware.
- For a temporary installation with clamps, ensure that the quarter-turn fasteners are turned fully and secured with a suitable safety cable.
- For elevated installations, secure the fixture with suitable safety cables, and always comply with relevant load dimensioning, safety standards, and requirements.
- The standard safety wire cable must be approved for a safe working load (SWL) of 10 times the weight of the fixture, and it must have a minimum gauge of 5 mm.

Overview

The G-7 Spot is a fast, compact, and lightweight mid-sized moving head spot with high-output and low power consumption, designed for multiple applications, including when wireless operation is essential.

The G-7 Spot features:

- An IP66 rated moving head with 6500K white LED engine*
- CMY color mixing with dichroic RGB macros, linear CTO and a CTB filter
- 6° to 48° zoom range
- Built-in wireless DMX
- Fully RDM implemented
- Two independent gobo wheels
- Variable and exchangeable 0-100% frost effect with a soft diffusion
- Low power consumption
- Superior thermal management for high reliability

*The lightsource of the fixture is expected to run until about 20,000 hours LM-70/TM-21.

Parts identification and terminology

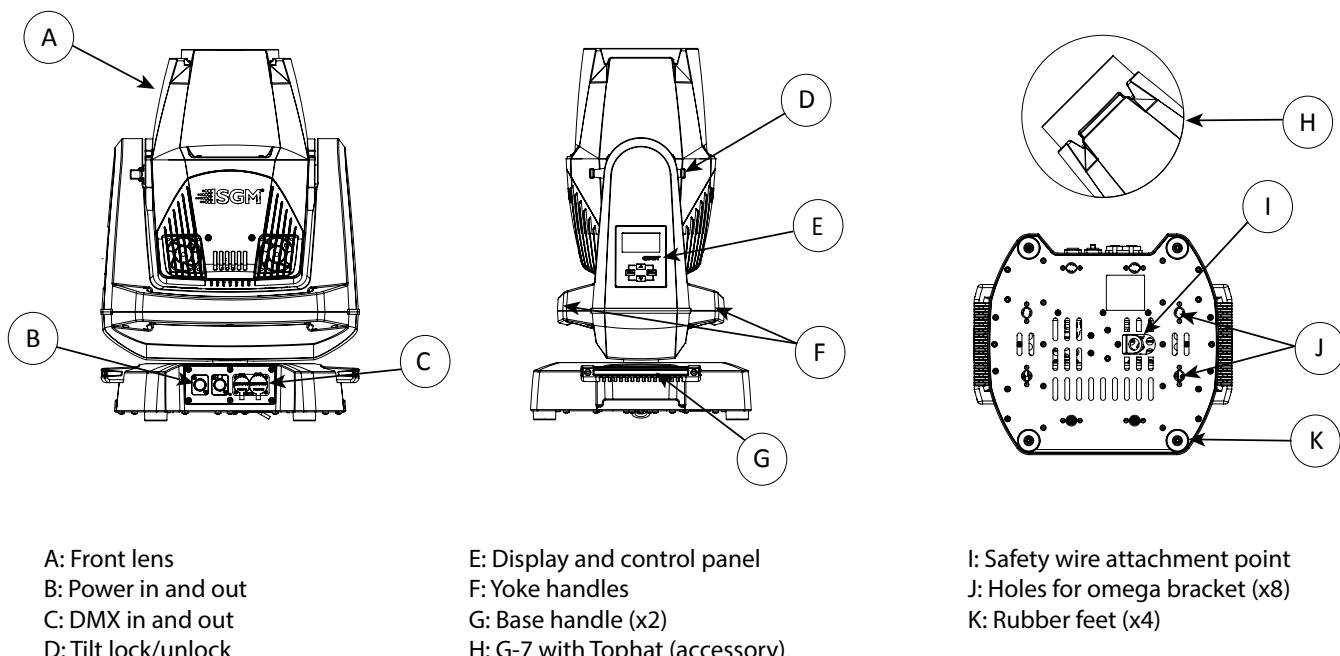


Figure 1: G-7 Spot parts and terminology

Preparing for installation

Unpacking

Unpack the device and inspect it to ensure that it has not been damaged during transport.

The G-7 Spot is shipped with:

- Power cable with TRUE1 power input connector, 2 m (78 in.)
- Two omega brackets with 1/4-turn fasteners
- Safety information leaflet

Location / application

The fixture is IP66-rated and designed for both indoor and outdoor events. This means that it is protected from:

- Dust, to the degree that dust cannot enter the device in sufficient quantities as to interfere with its operation.
- Pressure jets of water from any direction.

When selecting a location for the device, ensure that:

- It is situated away from public thoroughfares and protected from contact with people.
- It is not immersed in water.
- It has adequate ventilation.

When using the fixture with a DMX controller, ensure that:

- The DMX out of the last fixture is terminated with a 120 Ohm resistor between pin 2 and 3, according to the RS485 standard.
- The DMX out is properly sealed by mounting the protection cap, in accordance with the ingress protection (IP) requirements.
- A maximum of 32 fixtures are connected to the same DMX link.

Transportation

Always use the supplied packaging or suitable flight case for transportation and storage.

Release the tilt lock when transporting the fixture. Leaving the tilt lock blocked may cause damage to the fixture.

Never carry the fixture by connected cables or wires; use the handles.

Installing / Rigging the G-7 Spot

All SGM luminaries have locking points in the base for installation and rigging. The distance between the points from center to center is always 106 mm. While the base of the standard G-7 Spot include 1/4 turn fasteners camlocks to mount the omega brackets, the POI products come with M-10 nuts for M-10 screws.

The G-7 Spot may be installed in any orientation, with or without base, on the ceiling or on a wall surface.

Always use the supplied omega brackets to rig a G-7 Spot. Lock the bracket with the 1/4-turn fasteners.

N.B.: The 1/4-turn fasteners are only locked when turned fully clockwise.

Depending on the structure, please use appropriate and secure methods for mounting the Omega bracket.

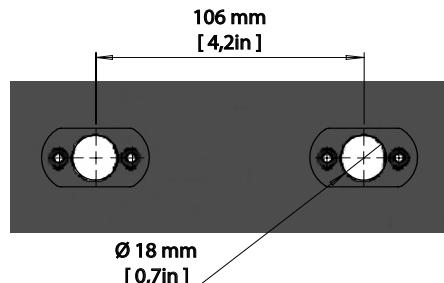


Figure 2: SGM locking points

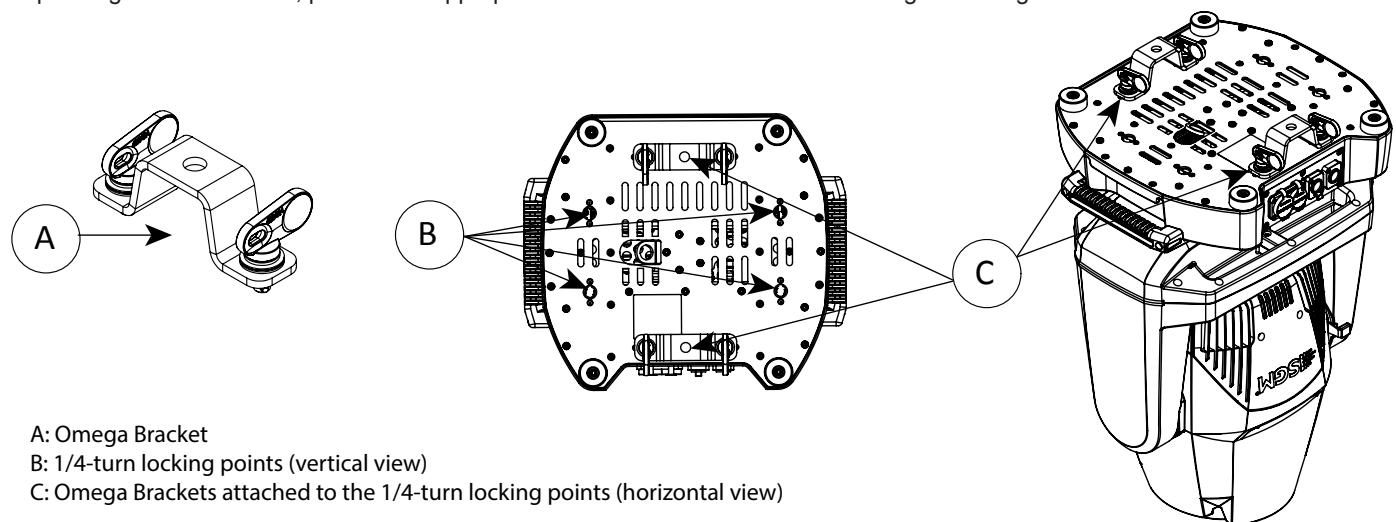


Figure 3: G-7 Spot base with Omega brackets

Rigging process using the SGM Omega bracket

Start the rigging process by blocking the lower working area, and make sure the work is performed from a stable platform.

1. Check that the clamp/bracket is undamaged and can bear at least 10 times the weight of the fixture. Check that the structure can bear at least 10 times the weight of all installed fixtures, lamps, cables etc.
2. Bolt the clamp/bracket securely to the omega bracket with a M12/ ½ bolt (min. grade 8.8 C5M) and a lock nut.
3. Align an Omega bracket with two 1/4-turns in the G-7 Spot base. Insert the fasteners into the G-7 Spot base and turn both levers a full 1/4-turn clockwise to lock. Install the second Omega bracket.
4. Working from a stable platform, hang the fixture on a truss, or other structure. Note the position of the base. The front of the base is to the right, when looking at the display panel, and when the fixture is sitting on the base. Tighten the clamps.
5. Install a safety wire that can bear at least 10 times the weight of the fixture. The safety wire attachment point is designed to fit a carabiner.
6. Check if the tilt lock is released. If not, push the slide button shown in the figure 4 to the right to release the tilt lock.
7. Verify that there are no combustible materials or surfaces to be illuminated within 0.3 m (12 in.) of the fixture.
8. Check that there is no possibility of head or yoke colliding with other fixtures.

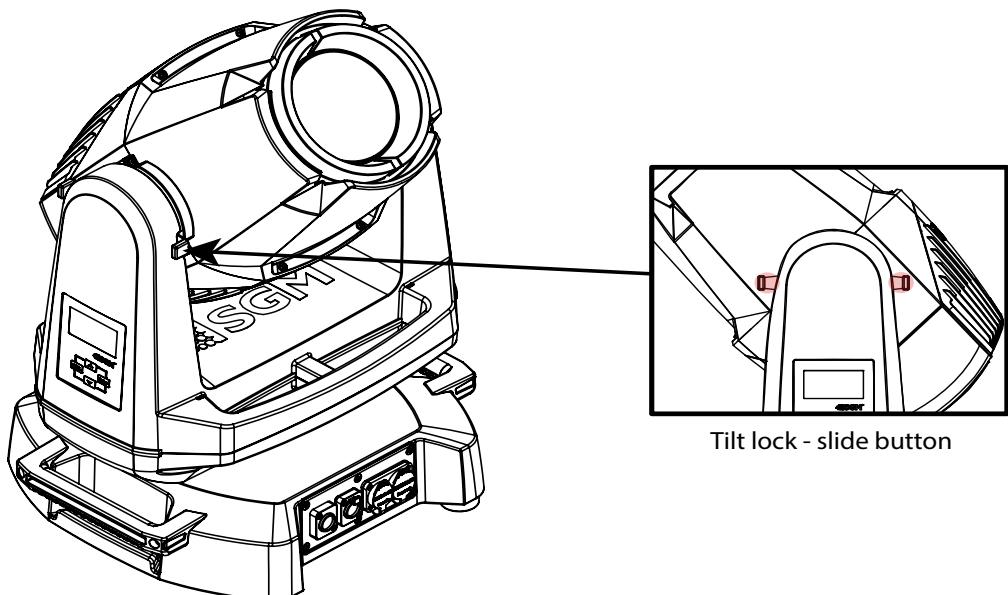


Figure 4: G-7 Spot tilt lock



WARNING! Always secure an elevated G-7 Spot with a safety wire

Fasten a safety wire (not shown) between the load-bearing support structure and the safety wire attachment point on the device. The safety cable (not included in the package) must:

- Bear at least 10 times the weight of the device (SWL).
- Have a minimum gauge of 4 mm.
- Have a maximum length (free fall) = 30 cm (12 in.).

CAUTION!!

- Always use a safety wire of a grade AISI 316 steel.
- Make sure the slack of the safety wire is at a minimum.
- Never use the yoke or the carrying handles for secondary attachment.

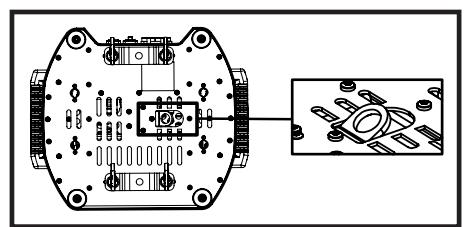


Figure 5: Safety Wire attachment point

Connecting AC power

The G-7 Spot can operate on any 100–277V, 50/60Hz AC mains power supply. The maximum power consumption is 500W.

Connect the fixture to AC power by using the supplied cable with a powerCON TRUE1 connector, or similar with a maximum of 20 A, to ensure the correct ingress protection (IP-rating).

The fixture must be grounded/earthed and be able to be isolated from AC power. The AC power supply must incorporate a fuse or circuit breaker for fault protection.

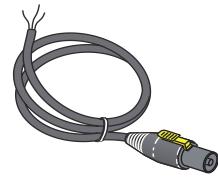


Figure 6: P-10 Power cable

The power cable color coding is given in figure 7:

- Connect the black wire to live
- Connect the white wire to neutral
- Connect the green/yellow wire to ground (earth)

For a temporary outdoor installation, the mains cable must be fitted with a grounded connector intended for exterior use.

Wire	Color	Symbol	Conductor
	Black	L	live
	White	N	neutral
	green/yellow	\perp or \ominus	ground (earth)

Figure 7: Connecting AC Power

For permanent installations, have a qualified electrician to wire the mains cable directly to a suitable branch circuit. The junction's ingress protection (IP) rating must be suitable for the location. Always use a junction box with a proper IP class suitable for the environment.

When installing standard type C circuit breakers there will be no limitations due to the fixture in-rush current. For assistance with alternative configurations, contact your SGM representative.

After connecting the G-7 Spot to power, run the on-board test by selecting TEST → AUTOMATED TEST in the menu, to ensure that the fixture and each LED are functioning correctly.

PLEASE NOTE!

The protective caps must be securely mounted on any unused DMX connectors, in order to maintain the IP-rating.

CAUTION!!

Do not connect the fixture to an electrical dimmer system, as doing so may cause damage.

Configuring the device

The G-7 Spot can be set up by using the control panel located in the yoke of the fixture or through RDM. After powering on, the G-7 Spot boots and resets. The current DMX start address and any status messages will be displayed thereafter. Navigate the menus and options using the arrows and select items using the ENTER button.

Display panel (A)

The display shows the current status and menu of the fixture, and can be used to configure individual fixture settings, check the fixture's wireless status, firmware version, and see error messages. In the settings, the display can be set to turn off if desired.


Next DMX Address (B)

Showing the next available DMX address depending on the fixture's DMX footprint.

DMX Start Address (C)

Display the current DMX address. The DMX address will flash if no data input. Select DMX address using the arrow buttons.

The DMX start address is the first channel used to receive instructions from the controller. For independent control, each fixture must be assigned its own control channels. If you give two fixtures the same address, they will behave identically. Address sharing can be useful for diagnostic purposes and symmetrical control.

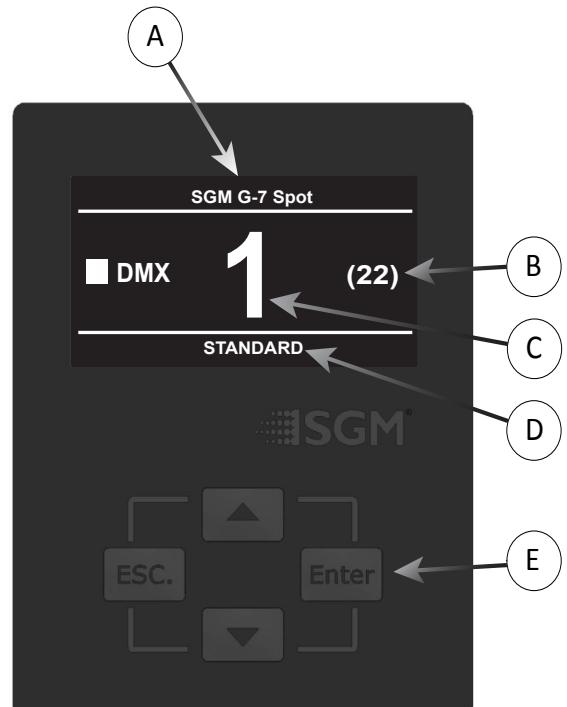

A: Display
B: Next fixture address
C: DMX Address
D: DMX Mode
E: Keyboard

Figure 8: Control panel view

DMX Mode (D)

Display the current DMX mode.

Using the keyboard (E)

- Press the 'ENTER' button to access the menu or make a selection.
- Press the arrow buttons to scroll up and down in the menus.
- Press the 'ESC' button to take a step back in the menu.

Connecting to a DMX control device

The G-7 Spot is controllable using a DMX control device and it can be connected using either a DMX cable or via the fixture's built-in CRMX wireless receiver system.

If using a cabled DMX system, connect the DMX IN cable to the input connector (male 5-pin XLR plug), and the DMX out to the output connector (female 5-pin XLR plug), both connectors on the rear of the fixture's base. For outdoor events, use at least IP65-rated XLR connectors.

NOTE!

If using a wireless DMX system, remember to use the protective caps in any unused DMX connector in order to maintain the fixture's IP-rating.

Connecting a wireless transmitter

The G-7 Spot is designed to look for wireless transmitters in 'connect' state, when this option is not yet enabled.

To connect the G-7 Spot to a wireless transmitter:

- Log off the currently paired wireless transmitter (by default the fixture is linked to the SGM factory transmitter). See "Disconnecting a wireless transmitter" below.
- Press the connect button on the wireless transmitter.
- Confirm that the fixture has paired with the wireless transmitter.

Disconnecting a wireless transmitter

To disconnect the fixture from the currently paired wireless transmitter, go to:

MENU → SETTINGS → WIRELESS DMX → LOG OFF.

Signal priority

The G-7 Spot can be paired to an active wireless transmitter simultaneously as being connected to cabled DMX. The fixture will prioritize cabled DMX over wireless DMX. The active input type is displayed under the wireless signal strength indicator.

The active input type is displayed under the wireless signal strength indicator. The signal strength can be also checked via RDM data by using an external RDM device (e.g. the SGM A-4).

Configuring the device for DMX control

About DMX

The G-7 Spot can be controlled using signals sent by a DMX controller on a number of DMX channels, which varies depending on the DMX mode that has been set). Visit www.sgmlight.com to see all DMX charts under the respective product, or upon request via support@sgmlight.com.

DMX is the USITT DMX512-A standard, based on the RS-485 standard. The signal is sent as DMX data from a console, or a controller, to the fixtures via a shielded twisted pair cable designed for RS-485 devices.

The cables can be daisy chained between the fixtures, with a possibility of having connected up to 32 fixtures on the same DMX link. Up to 300 meters (1000 ft.) of cable is achievable with high quality DMX cables. All DMX links must be terminated in the last fixture by connecting a DMX termination plug to the last fixture's 5 pin DMX out connector.

PLEASE NOTE:

- Standard microphone cable is not suitable for transmitting DMX.
- Up to 32 fixtures can be linked to the same DMX chain. Additional fixtures will overload the link.
- The last fixture must always be fitted with a DMX termination plug to the fixture's DMX out.

Configuring the device for DMX control

DMX Start address

The G-7 Spot can be operated in different DMX modes. For any of the modes, the first channel used to receive data from a DMX control device is known as the DMX start address.

For independent control, each G-7 Spot must be assigned its own DMX start address. For example, if the first G-7 Spot is set to 22ch DMX mode with a start DMX address of 10, the following G-7 Spot in the DMX chain should then be set to a DMX address of 32. As the first fixture uses all the first 22 DMX channels, including channel 32, the next available channel is 32 ($10+22=32 >> 32$).

If two or more G-7 Spot have the same DMX start address, they will behave identically. Incorrect settings will result in unpredictable responses from the lighting controller. Address sharing can be useful for diagnostic purposes and symmetrical control.

Setting the DMX address

The DMX address is shown in the display of the control panel. To change the address setting, press the up and down arrows. When the desired address is displayed, press 'OK' to save the setting. For your convenience, the next available DMX address is displayed to the right. Note that channel spacing is determined by number of channels of the DMX mode.

See "Configuring the device" on pages 8-9 for instructions on using the display panel.

The G-7 Spot also offers the option to set the DMX address through RDM.

DMX modes

All DMX charts are available at www.sgmlight.com under the respective product, or upon request via support@sgmlight.com.

G-7 Spot Connection diagram

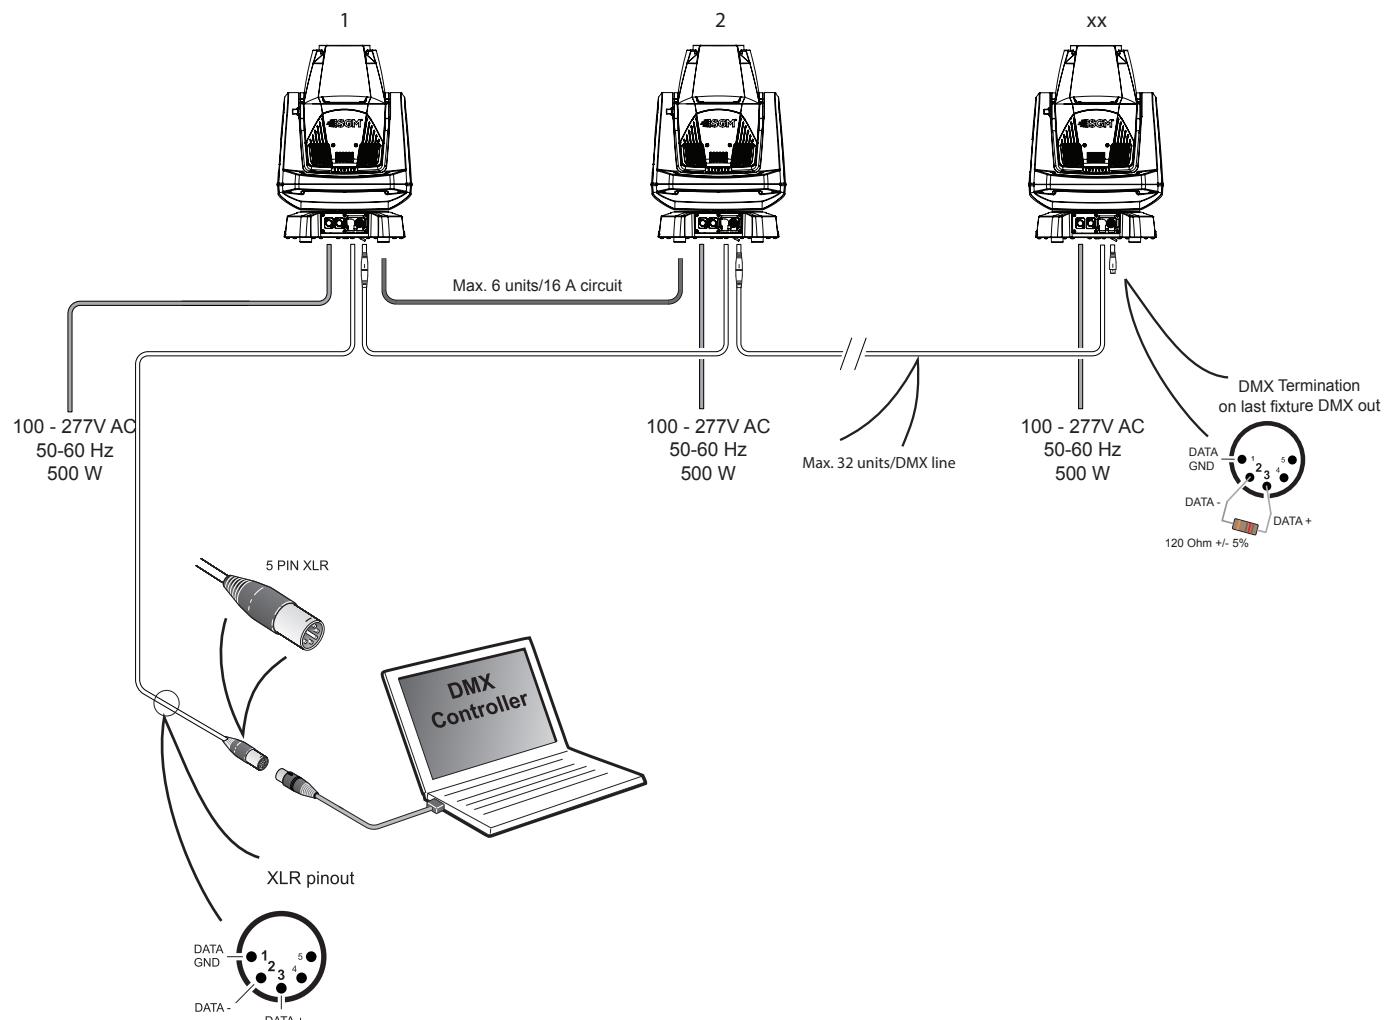


Figure 9: Connecting DMX in G-7 Spot

Control menu

To know all the functions available in the G-7 Spot menu, please contact support@sgmlight.com.

RDM

Supported RDM functions

The G-7 Spot features support for various RDM functions.

RDM (Remote Device Management) is a protocol enhancement to USITT DMX512 that allows bi-directional communication between the fixtures and the controller over a standard DMX line. This protocol will allow configuration, status monitoring, and management.

You will need a RDM controller to get control over the supported parameters. See the tables below for supported RDM functions.

RDM functions

To get access to all RDM functions please contact support@sgmlight.com.

Sensors

To get access to all sensors please contact support@sgmlight.com.

Factory default

When restoring factory defaults the following settings will be set:

- DMX address = 1
- Startup mode = DMX
- Display saver = Off
- Flip screen = Off
- RDM device label set to = Fixture type name
- Internal program reset

Fixture properties

CMY color mixing

The G-7 Spot is a CMY color-mixing moving head designed to match the SGM RGB color palette, with linear CMY dichroic flags and a linear CTO. It has been also added dichroic RGB macros (deep red, green and blur) and a CTB filter.

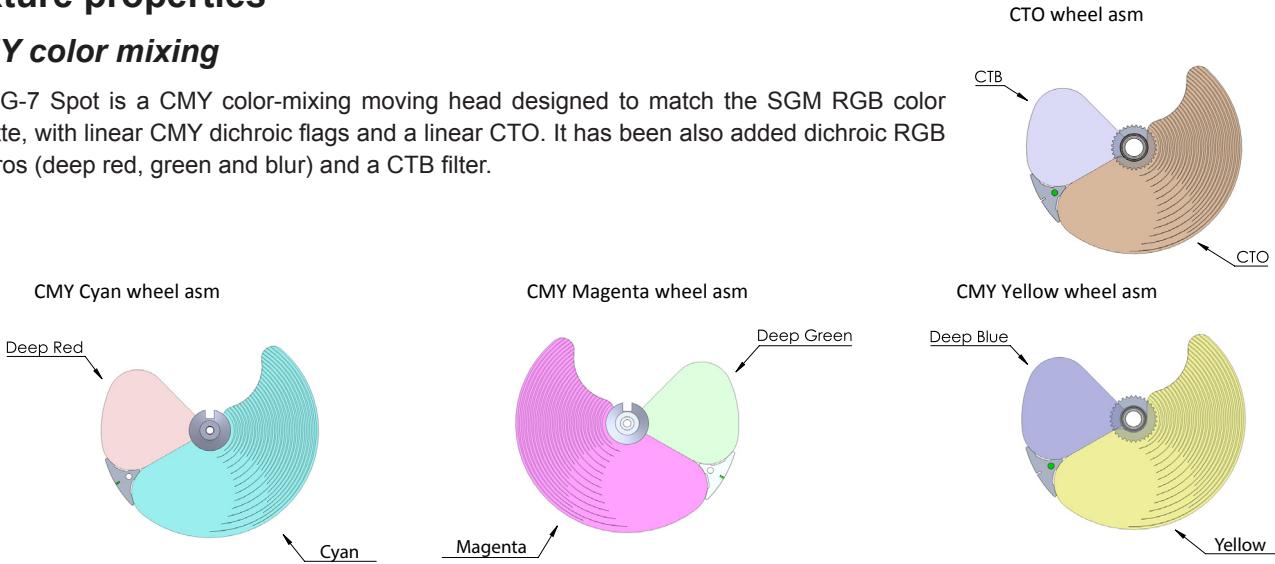


Figure 10: G-7 Spot CMY color mixing

Effect wheel

The G-7 Spot also includes an extra effect-color wheel with an integrated FX area, 5 color filters and an open slot.

The color filters included in the effect-color wheel are the following:

- congo blue
- amber
- light green
- lavender
- high CRI

Quarter minus green

The G-7 Spot includes a quarter minus green filter, accessible via the effect-color wheel. This filter allows the user to modify the amount of green in the white LED source, making the G-7 Spot able to match different camera settings, emulating other light sources, or/and increasing the CRI. The quarter minus green filter can be combined with the linear CTO or the CTB filter.

Two independent gobo wheels

The G-7 Spot comes with two independent gobo wheels:

- Gobo wheel with nine static gobos + one open slot.
- Gobo wheel with six gobos + one open slot. Each gobo is indexable, interchangeable and with bi-directional rotation.

High-precision pan and tilt

The G-7 Spot has a fast pan and tilt movement, with a 433° pan and 280° tilt movement.

Ultra high-speed strobe effect

The ultra high-speed strobe effect introduces instant white color control. Random strobe and pulse effects can be generated with variable speed.

Prism

3-facet rotatable and indexable prism.

Internal frost

The soft high-quality frost filter is variable from 0% to 100%.

Fixture properties

Flipping the OLED display

If the fixture is installed hanging upside down, it might be useful to flip the display so that it is easier to read. To flip the display go to "SETTINGS → DISPLAY FLIP" in the menu, or press the up and down buttons on the control panel at the same time.

Setting the display saver

By default the OLED display dims down after a short period when the control panel is not in use, but it can also be set to turn off completely. Pressing any key will always turn on the display or restore it to normal brightness. To change the display saver, go to OK → SETTINGS → DISPLAY OFF.

NOTE: to avoid the risk of display deterioration caused by long term use in permanent installations, it is recommended to use the DISPLAY OFF setting.

Gobo wheels

Identification of gobo wheel

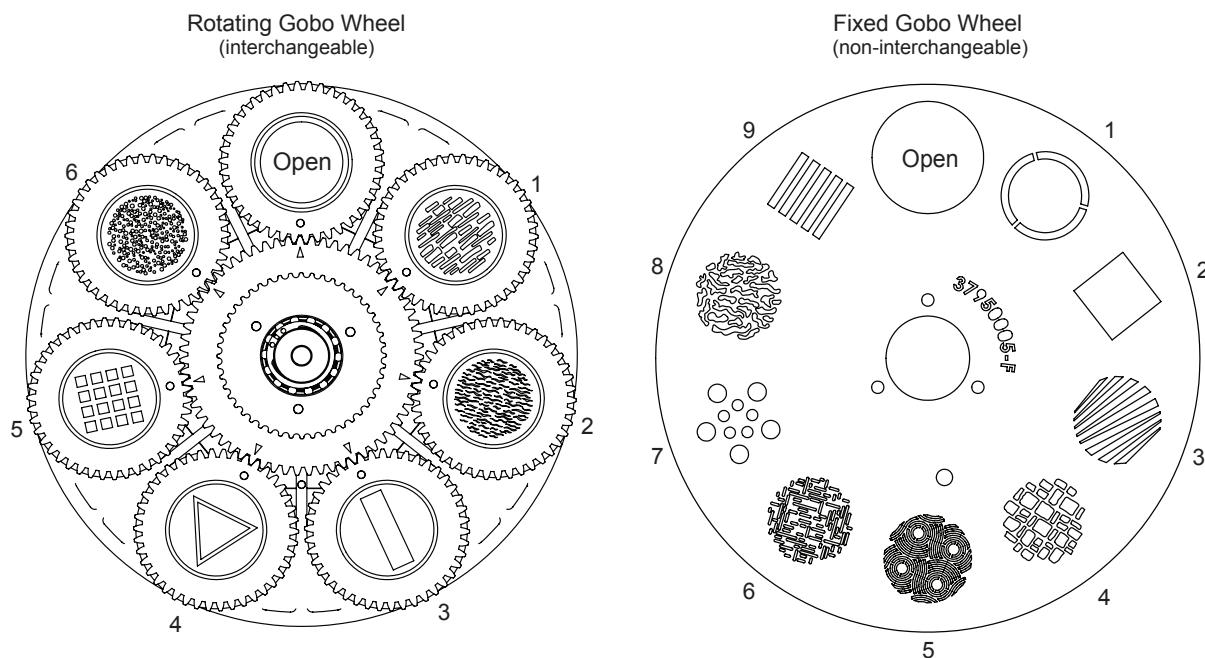


Figure 12: Identification of gobo wheels

Rotating Glass Gobo Wheel		
No.	Description	Part No.
Open	Open gobo	37950012
1	Breakup lines	37005012
2	Breakup waves	37005013
3	Bar	37005014
4	Triangle	37005015
5	Window 4x4	37005016
6	Dots	37005017

Fixed Gobo Wheel		
No.	Description	Part No.
No gobo	Empty	-
1	Ring	-
2	Square	-
3	Asymmetric horizontal	-
4	Brick wall	-
5	Viking	-
6	Matrix	-
7	Dots breakup	-
8	Ripples	-
9	Vertical bars	-

Gobo replacement

Replacing the gobos

To replace one or more gobos:

1. Disconnect the fixture from power and allow it to cool.
2. Position the head upwards and apply the tilt lock.
3. Before removing one of the rear head covers, identify where the rotating gobo wheel is located (same side as the power and DMX connectors). Then, loosen the 2 screws to remove the rear of the head cover.

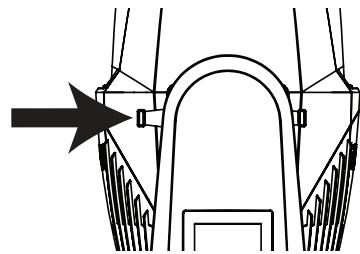


Figure 13: Tilt lock

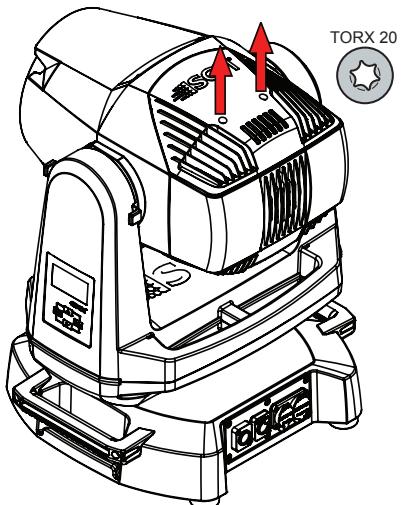


Figure 14: Removing the head cover

4. Remove the gobo wheel hatch by loosen the six screws for accessing to the gobo wheel.

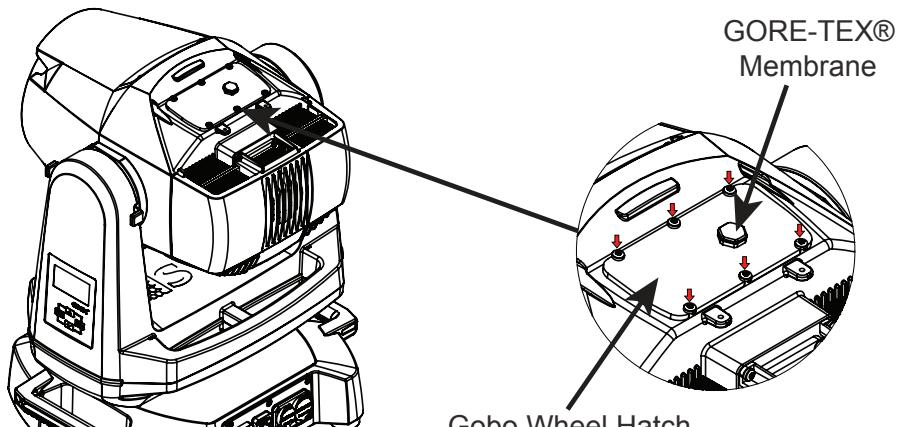


Figure 15: Removing gobo wheel hatch

5. Turn the gobo wheel until the gobo you want to replace is accessible.
6. Pull the gobo holder out of the gobo wheel.

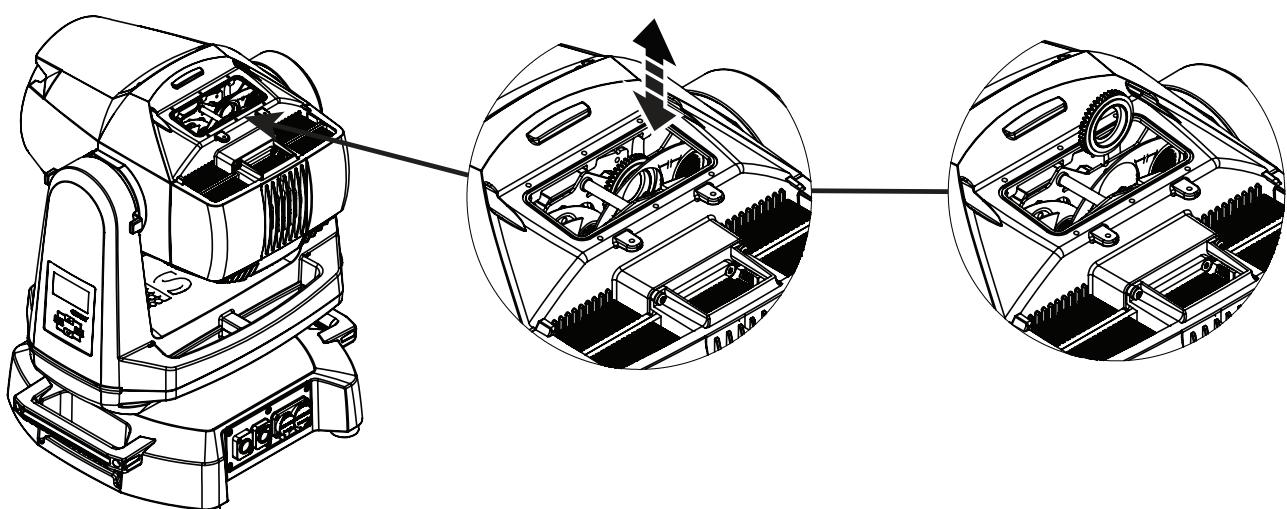


Figure 16: Removing gobo holder

Replacing a gobo in a gobo holder

1. Remove the defective/old gobo from the gobo holder.
2. Place the new gobo with silver side towards the light source.
3. Align both index marks of the gobo and the gobo holder, as shown below.
4. Insert the gobo holder and align it with the index mark in the gobo wheel, as shown below. If necessary, continue replacing gobos one by one as described.

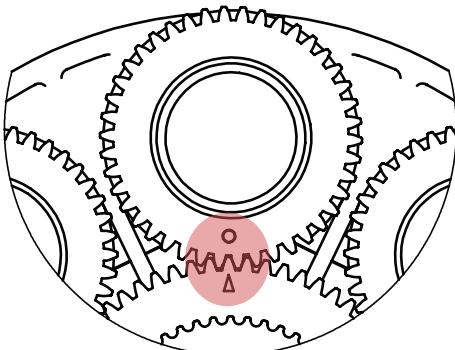


Figure 17: Replacing gobos in a gobo holder

5. If no further service is necessary, reinstall the gobo wheel hatch and the rear head covers.

For more information on how to replace G-7 Spot gobos, please contact support@sgmlight.com

GORE-TEX® Membrane

The gobo hatch includes a GORE-TEX® Membrane, which allows the fixture to breathe. In order to vacuum test the fixture, the GORE-TEX® membrane has to be removed.

For more information on how to vacuum test the G-7 Spot, please contact support@sgmlight.com

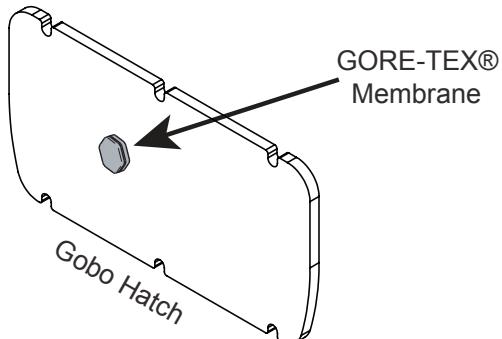


Figure 18: GORE-TEX® Membrane

Accessories

The G-7 Spot can be used with different types of accessories, such as the Top Hat. To know more about all the available G-7 Spot accessories, please see www.sgmlight.com, or contact your local SGM dealer.

G-7 Spot Top Hat

The G-7 Spot is extendible using the Top Hat, which main function is to create discrete lighting designs, reducing flare coming from the direct light source.

The Top Hat can be easily mounted through magnetic fastening. When correctly aligned to the front lens, the Top Hat will snap into place due to the four powerful magnets.

- A: Top Hat (front view)
- B: Safety wire
- C: Magnets (back view)

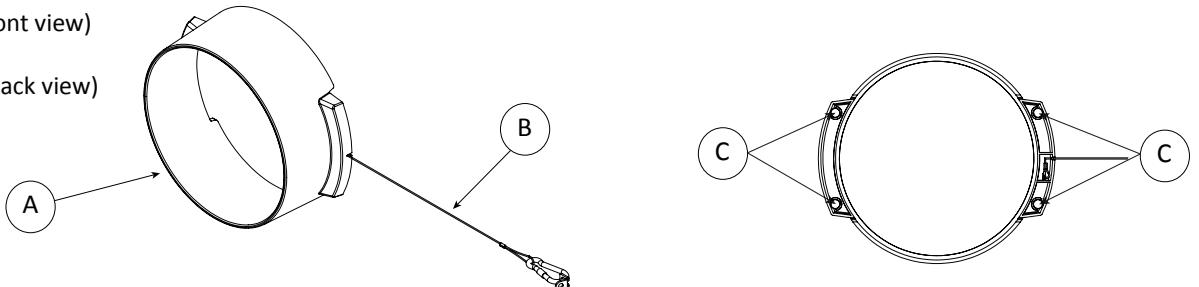


Figure 19: G-7 Spot Top Hat overview

Attaching the Top Hat

1. Align the Top Hat correctly to the front lens.
2. Allow the powerful magnets (2 on each side) to snap into place.

To detach the Top Hat, simply remove it in a straight upwards line with a firm grip. Ensure there are no metal dust or any other particles where the magnets are located.

Troubleshooting

Problem	Potential cause(s)	Remedies
Fixture does not respond or appears to be off.	No power to the fixture.	Confirm that the power is switched on, that the cables are plugged in and the TRUE1 connector is inserted and turned to its locked position.
Fixture suddenly turned off.	Power was turned off.	Check the switches and breakers.
Fixture suddenly stopped responding.	The wireless transmitter or connections, was disconnected/tampered with.	Inspect the wireless transmitter and connections.
	DMX cables was disconnected.	Inspect DMX cables.
Fixture operates irregularly / abnormal.	DMX address is incorrect.	Inspect and enter the correct DMX address.
	DMX cable polarization is inverted (pin 2 + 3).	Install a phase-inverter or replace cables.
	DMX cable is corrupted.	Replace or repair defective cables and/or connections.
	DMX link is not terminated.	Install a XLR 120ohm DMX termination at the end of the DMX link.
	Corrupted DMX cable.	Replace or repair defective cables and/or connections.
	The fixture operates an internal program.	Go to MENU → MANUAL → STOP PROGRAM
	A corrupted fixture generates noise/disruptions on the DMX link.	Track and isolate the corrupted fixture.
Pan/tilt is skipping/shuddering	Obstacles is within the required pan/tilt clearance	Inspect and remove any obstacles constraining free operation of the pan/tilt.
Pan/tilt does not reset correctly.	Calibration values are missing.	Contact SGM support or certified SGM service partner
Display is turned on, but the fixture doesn't respond	Several causes	Contact your local SGM dealer or support@sgmlight.com

Maintenance

SGM Vacuum Test kit

The Vacuum Test Kit is an accessory suitable for all SGM IP-rated fixtures, made for testing the IP validity after having reassembled the fixture.

In order to ensure the IP-rating of the G-7 Spot (POI), it's highly recommended that the fixture is always vacuum tested after installing or swapping any part that might compromise the IP-rating.

SGM disclaims liability for any damage occasioned by the non-use, or inability to use, the vacuum test kit after reassembling the fixture.



Figure 20: SGM Vacuum Test Kit

SGM Uploader cable

The SGM USB to DMX cable is an accessory used mainly to update the fixture with the latest SGM firmware. See below how to update the fixture with the latest firmware.

The SGM Uploader cable is also used for controlling the DMX values channel by channel through the Firmware Uploader Tool software (available for download at www.sgmlight.com).



Figure 21: SGM Uploader cable

The firmware installed in the fixture can be identified in different ways:

- When powering on the fixture, the display shows the current installed firmware version (only standard).
- Go to MENU → INFO → FIRMWARE VERSION (only standard).
- Through RDM.

We recommend that the fixture's firmware is always up-to-date. The latest firmware version is available for download under the respective product at www.sgmlight.com.

To update your G-1 Beam (POI) with the latest firmware, use an SGM USB 5-Pin-XLR uploader cable, and a Windows-based computer with the SGM Firmware Tool software installed (available for download at www.sgmlight.com).

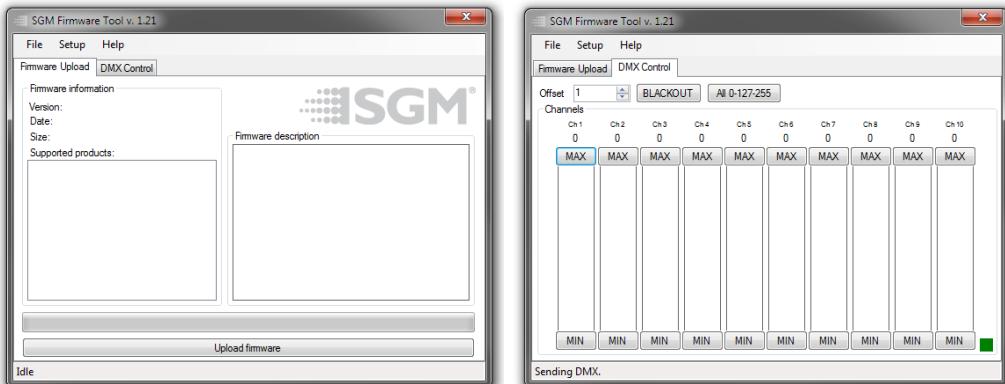


Figure 22: SGM Firmware tool

Additionally, the Firmware Tool software offers a simple DMX controller featuring 512 DMX channels for test purposes.

Cleaning

SGM luminaires with IP66-rating do not need any cleaning procedures inside the fixture. However, cleaning the front lens may be needed to achieve the maximum light output after exposure to dust, sand, or dirt. Exterior housing can also be cleaned to get a better look. To maintain adequate cooling, fans must be cleaned periodically.

Whenever necessary, clean the G-7 Spot using a soft cloth dampened with a solution of water and a mild detergent. Do not use products that contain solvents, abrasives, or caustic agents for cleaning, as they can cause damage to both hardware, cables, and connectors.

Cleaning will vary greatly depending on the operating environment and installation. It should therefore be checked at frequent intervals within the first few weeks of operation to see how often cleaning is necessary.

Ordering Information

The G-7 Spot has different variants and can be used with a variety of accessories.
Contact your local SGM dealer to get the latest pricing and news about available fixtures and accessories.

Please note: the products listed below are subject to change without notice.

G-7 Spot fixtures

G-7 Spot, Std, BL.....	P/N: 80102500
G-7 Spot, Std, WH.....	P/N: 80102501
G-7 Spot, Std, CU.....	P/N: 80102502

The G-7 Spot can be ordered in any RAL color. Contact your local SGM dealer for ordering customized color housings or for more information.

G-7 Spot accessories

2 m power cable with TRUE1 power connector.....	P/N: 07860040
2 x Omega brackets, BL / WH.....	P/N: 83060602 / 83061206
SGM USB uploader cable.....	P/N: 83062011
G-7 Top Hat.....	P/N: 83061184
Flightcase for 2 pcs G-7 Spot.....	P/N: 82051017

Support hotline

SGM offers 24/7 technical support hotline.

Worldwide: +45 3840 3840

US: +1 877 225-3882

support@sgmlight.com

Approvals and certifications

Conforms to
Conforms to
Conforms to

2014/35/EU: Low Voltage Directive
2014/30/EU: EMC Directive
2011/65/EU: RoHS2 Directive



The information in this document is subject to change without notice. For the latest information, see www.sgmlight.com.

User Notes

User Notes



SGM Light A/S
Sommervej 23
8210 Aarhus V
Denmark
Tel: +45 70 20 74 00
info@sgmlight.com
www.sgmlight.com